



Notes:

1. The MAX232 line driver requires 5 tantalum capacitors. The MAX233 is a direct replacement and has the capacitors built in.
2. If your serial port is the DB25 type, the MAX232 pin 8 goes to pin 2, the MAX232 pin 7 goes to pin 3, and the DB25 pin 7 goes to ground.